

# CRC Brake Maintenance Guide



# **BRÄKLEEN® BRAKE PARTS CLEANER**

Thoroughly clean brakes BEFORE disassembly. This will allow for proper inspec-

tion. Always clean new or turned rotors prior to assembly.

Óriginal Non-Flammable 75089 539 g aerosol Non-Chlorinated Sor g aerosol Non-Chlorinated Power Jet 397 g aerosol 75088 75050

**Bulk Sizes Available** 



## WHEEL BEARING GREASE

- Select the appropriate grease based on usage: daily driver, late model spec, high perfromance or 4-wheel drive.
- Clean and repack bearings at every brake job. Do not mix different grease bases.

397 g cartridge 73312



Apply on new, freshly turned or existing rotors. De-Squeak fills in tiny imperfections that cause noise, and aids in the friction mating/break-in process.

7508Õ 319 g aerosol

# FREEZE-OFF® SUPER PENETRANT

Super penetrant breaks through corrosion, for easier adjusting and dis-assembly. 326 g aerosol

## SYNTHETIC BRAKE & CALIPER GREASE

75353 75359 340 g tub with brush 227 g brush-top bottle

## SILARAMIC® CERAMIC FORTIFIED **BRAKE SYSTEM GREASE**

75363 225 g tub with brush

- Lubricate all metal-to-metal contact points
- Clean and lubricate all shoe landings. This will ensure smooth operation of the shoes. Lubricate all parking brake hardware and shoe adjusters to prevent binding & corrosion.
- Lubricate backs of all shimmed disc pads. This will prevent corrosion and brake noise.
- To prevent corrosion build-up, lubricate the underside of the rotor hat or the hub facia

